

## This release contains:

Туре	File/Subcomponents	Label	File updated in this release
This document	-	-	Yes
HIFF file	ABC_DPV1_SERM_7741_1_00_03_HmsOtgw.hiff	7741_1.00.03	Yes
	SW	7741_2.06.01	Yes
	HDL	7741_2.03.01	Yes
	WEB	7741_2.07.01	Yes
	FWLoaderDS	7044_1.19.01	Yes
GSD file	HMSA183B.gsd	7741_1.00.03	Yes

# Package history:

Release	Update
First release	

HMS Industrial Networks AB Page 1 of 4

Application

20211018



#### Reason for release:

First release

#### Affected functionality

		Description
Affected functionality	⋈ Network conformity	First release
	⊠ Web interface	
	□ Network interface	
	⊠ Security	
	⊠ Stability	
	⊠ Other	

#### Field update recommendation

		Description
Field update recommendation	☐ Update required for conformance testing	First release
	☐ Only devices in the field showing problems	

### Compatibility:

#### **Hardware**

Firmware can be downloaded to Anybus Communicator hardware with serial and profibus interfaces.

PCB	Compatible?	Hardware-ID (48 bits)
8521-1.0.1	Compatible	0x090003080000

#### **Device description file (DDF)**

GSD file for PROFIBUS

EDS	Firmware	Description
HMSA183B.gsd Version 1.00	1.00	GSD version 1.00 is compatible with firmware version 1.00.

# How to upgrade from previous versions:

It is very important that the following steps are performed in correct order, otherwise the module may be unusable and must be sent back to HMS for recover.

#### Firmware upgrade:

#### Via Web configuration interface.

- 1. Disconnect all cables to all networks interfaces except the configuration port of the gateway.
- 2. Make sure the configuration port is connected to the same network as the device performing the firmware upgrade.

**HMS Industrial Networks AB** Page 2 of 4



- 3. Start up gateway.
- 4. The default IP settings of the gateway is IP address: 192.168.0.10, Subnet mask: 255.255.255.0. If these values cannot be used in the setup or if the IP settings have changed and is unknown, then the HMS IPconfig tool can be used to change IP settings of the gateway. The tool is located on https://anybus.com/.
- 5. Open up a webbrowser and enter the IP address of the gateway.
- 6. Click on the "Maintenance"->"Files & Firmware" and follow the instructions on the webpage.

#### **Known limitations:**

Title	Description	Issue(s)

HMS Industrial Networks AB Page 3 of 4

# Updated in version 1.00:

Title	Category	Description	Issue(s)
Initial release	Other		
	change		

Bugs that are found in this software release should be reported back to HMS support department. Report product, software version, configuration, how to reproduce behaviour, and the effects of the bug.

HMS Industrial Networks AB Page 4 of 4